## **ECHOMETER TWM and Well Analyzer USB Drivers: Installation Guide for Windows XP**

If you haven't already downloaded TWM, do so now.

## **TWM Installation**

- If your Well Analyzer is currently connected, turn the power off and disconnect it.
- Install the Total Well Management software.
- If the installer finds the 2008 version of TWM on your machine, it must be uninstalled first.

Click "OK" to launch the uninstall process.



• Then click "Yes" run the uninstall.



- After uninstalling the 2008 version, the installation will continue as normal.
- Connect the Well Analyzer to the USB port of your computer and turn on the Well Analyzer power.

Phone: (940) 767-4334


E-Mail: info@echometer.com

Fax: (940) 723-7507

## **Well Analyzer Driver Installation**

 Windows XP uses a Found New Hardware Wizard to guide you through the installation process.

When it appears, select the "No, not this time" option and click "Next".

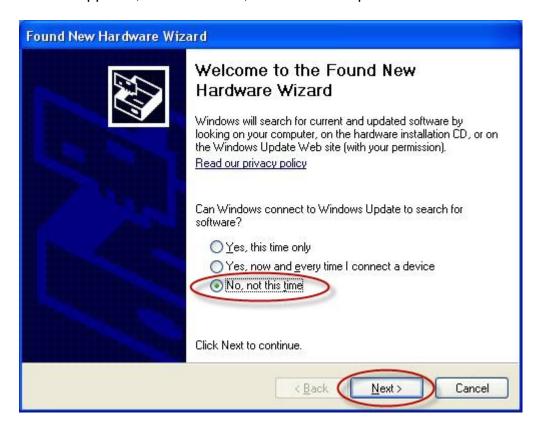


Phone: (940) 767-4334

E-Mail: info@echometer.com

Fax: (940) 723-7507

On the next screen, "Install the software automatically" and click "Next".

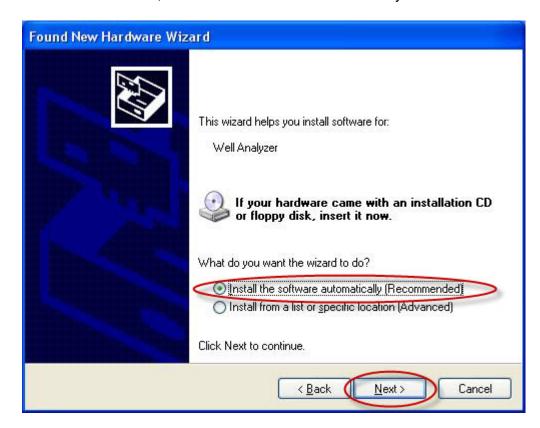

• The driver will be automatically installed. Click "Finish" to close the Wizard.

Phone: (940) 767-4334


E-Mail: info@echometer.com

Fax: (940) 723-7507

**Well Analyzer Driver Verification** 

 Start TWM. Enter "Acquire Mode", select "Setup", and go to the "Equipment Check" tab.

This screen displays the status of the connected Well Analyzer.

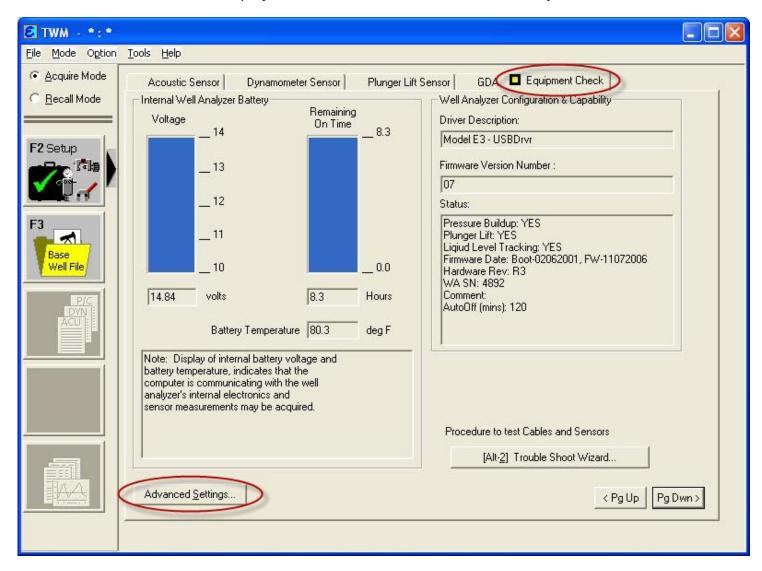


 If the screen displays the message "UNABLE TO CONNECT TO WELL ANALYZER!", check settings.
Click on the "Advanced Settings" button and select Well Analyzer Model Ethers.

Click on the "Advanced Settings" button and select Well Analyzer Model E3.

Phone: (940) 767-4334

E-Mail: info@echometer.com

Fax: (940) 723-7507

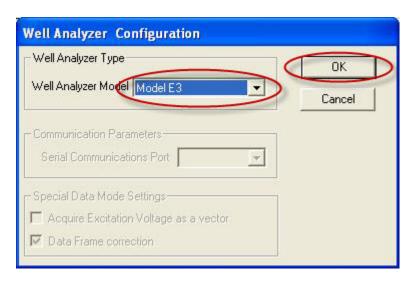

Phone: (940) 767-4334 Fax: (940) 723-7507

E-Mail: info@echometer.com

## You're done!